

Product Dissection & Benchmarking Project Handout II

Measurements and Dissection. Estimated time: 2 hours

Preparation before beginning the Lab:

Read *Noise Measurement* and *Electric Circuits* Handouts.

Section:	004
Team #:	2
Team Name:	Reanimation
Members:	Emily Wolf
	Tom Harford
	Brianna Post
	Rob Heisler

Lab II Assignments:

1. Complete data sheet 2.
2. Submit your completed lab 1a and 1b on Angel. Make sure you have your product name on each sheet. The file **MUST** be saved as a PDF file (file/save as/pdf). The filename **MUST** be:



TeamN_ProductName.pdf

Example: Team3_Lab2_CrestSpinBrushPro.pdf

3. Prepare a comprehensive features comparison table for features that are in your list of features to be benchmarked.

Laboratory Tools:

1. Camera
2. Sound intensity (Decibel) meter
3. Hack saw
4. Screw driver
5. Pliers
6. Multimeter
7. Connectors
8. Ziplock bags

I. Noise Measurement:



Tasks:

In a quite environment, place the Decibel meter's microphone close to the product running with no load. Record the decibel readings for various distances on data sheet 2. To make good sound readings, you need to set the sound meter with the following settings:

- Range: Lo
- Response: F
- Function: A


II. Power Measurement:



Tasks:

Battery measurement:


1. Remove the battery (batteries) from the product place them on the workbench.
2. Using a multimeter, measure the voltage across the battery (or batteries placed in series). Check the settings on the multimeter to make sure you are reading in Volts DC. Record the voltage on data sheet 2.
3. Note: If you arrange the batteries in the wrong order, the batteries will become warm. The batteries are being shorted.

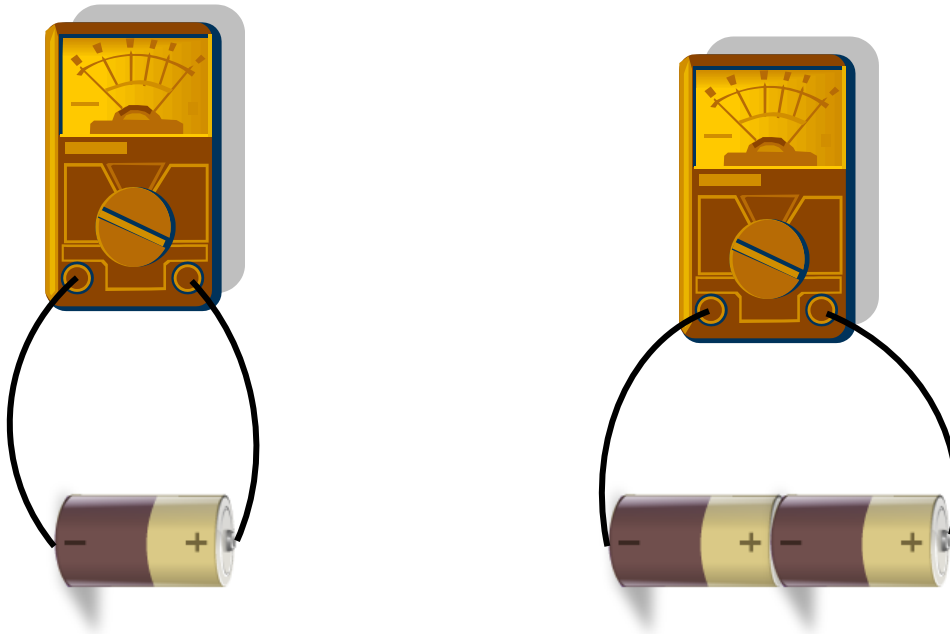

4. Replace the battery (batteries) into their working positions, replace the battery cover, and turn the product on to ensure the batteries are placed correctly.

Measuring current under 'no load' conditions:

5. Remove the battery cover and leave the batteries inside the product. You may have to hold the batteries on the contacts inside the toothbrush housing.
6. Turn on the product.
7. Take a small piece of wire and connect the batteries in series. If you only have one battery use the small piece of wire to connect to the battery contact.
8. Switch on the multimeter. Set the multimeter to read current in milliamps (mA). Check the leads from the multimeter and make sure connected properly.
9. Connect a multimeter in series with the exposed ends of the batteries.
10. Record the current reading for the 'no load' condition. Note that the reading will fluctuate a little. Record several readings and take the average.

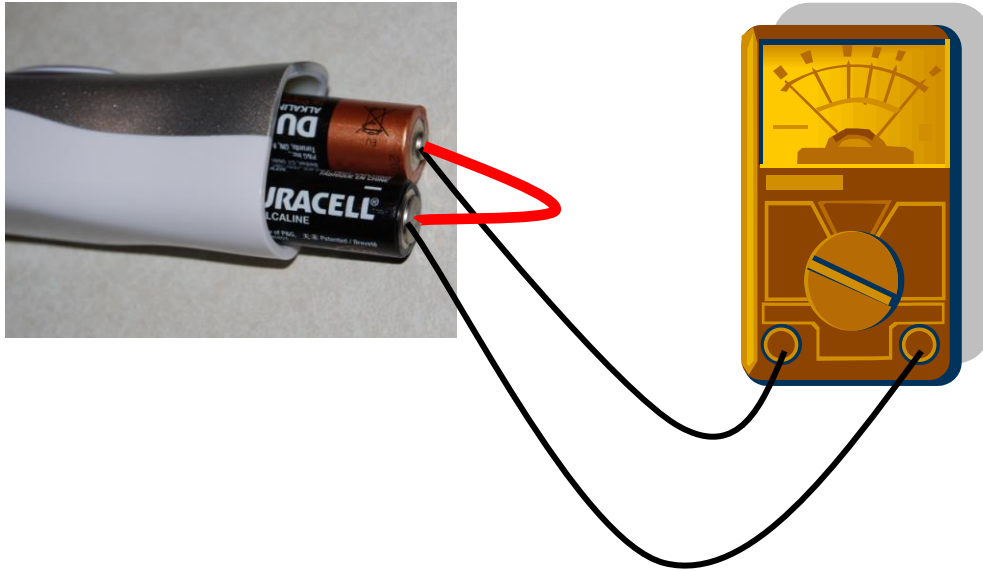

Measuring current under 'load' conditions:

11. Measuring current under load. Repeat steps 5-10, except the toothbrush should be positioned with the bristles rubbing against the workbench (simulating brushing of teeth). The toothbrush should be pressed down with similar pressure as when brushing ones teeth. This will be the first 'under load' measurement.
12. Step 11 should be repeated with each group member taking a turn at simulating brushing. At the end of this step, there should be as many averaged 'under load' measurements as the number of team members.

Calculating Power

13. Using the formula $P=VI$ calculate the power required to run the product.
14. Assume that an average non-rechargeable AA battery has a capacity of 2500 mAh and an average non-rechargeable AAA battery has a capacity of 1500mAh. Using the average power consumption 'under load' calculate how long (in hours) the tooth brush can run before the batteries die.
15. Estimate how long it takes (or you should take to brush your teeth). Assuming you brush your teeth twice a day, calculate how many days use before you need to replace your batteries.

DATA SHEET 2	Team #: 2
Electric Toothbrush - Testing: Lab II	
Manufacturer/Model Number: Oral B Cross Action Power	

1. Product Weight:

Item:	Weight:
Complete Toothbrush	0.164
Batteries	0.054
Detachable brush head if applicable	0.008

Notes:

2. Noise Measurement:

Location:	Noise level:
Brush head 4 in away from decibel meter	80.1
Brush head 3 in away from the decibel meter	81.6
Brush head 2 in away from decibel meter	84.0
Brush head 1 in away from the decibel meter	87.0
DC motor 4 in away from decibel meter	69.5
DC motor 3 in away from the decibel meter	75.0
DC motor 2 in away from the decibel meter	76.0
DC motor 1 in away from the decibel meter	79.0

Notes:

3. Power Measurement:

Voltage supplied to the circuit:

	Battery Type	Measured Volts (V DC)
Battery 1	Duracell	1.574 V
Battery 2	Not applicable	Not applicable

Total Voltage:

	Connection Type	Measured Volts (V DC)
Battery 1 and Battery 2	Not applicable	Not applicable

Current Measurements

	Averaged Current Value (mA)
No Load Condition	140.0 mA

Current Measurements

	Current Value (mA)
Load 1.	260.0 mA
Load 2.	170.0 mA
Load 3.	180.0 mA
Load 4.	200.0 mA
Load 5.	160.0 mA
Mean current 'under load'	194.0 mA

$$\text{Power (no load)} = \frac{\text{Voltage}}{1.574 \text{ V}} \times \frac{\text{Current}}{0.14 \text{ A}} = \frac{0.22}{\text{Units}} \text{ Watt}$$

$$\text{Power (under load)} = \frac{\text{Voltage}}{1.574 \text{ V}} \times \frac{\text{Current}}{0.194 \text{ A}} = \frac{0.31}{\text{Units}} \text{ Watt}$$

3. Battery Life

1. Number of hours available per single battery 'under load' conditions: 7.732 Hours
2. Estimate duration for each brushing 0.0333333 Hours
3. Number of days before battery replacement About 232 Days